
Installing a 4 Gang Harness

- Stretch the harness out untangle is necessary: Note: Single wires are marked RF (Right Front), LR (Left Rear) and RR (Right Rear)
- Disconnect each 3 wire connector about 32 inches from the single switch connection.
- Remove the terminals from the male side of each 3 wire connector (Note: there is another instructions sheet with these steps.

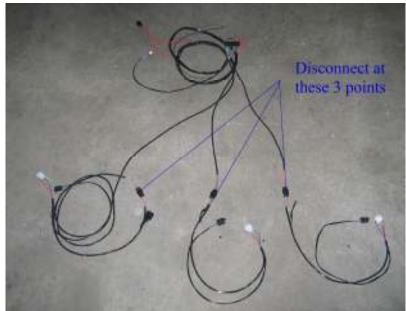

- Wrap electrical tape around the terminals to keep them from "grabbing" the conduit
- Hang the Master switch on drivers door
- Lubricate the 9 wires with liquid soap—feed thru Conduit
- Feed the Hot Feed (red wire) thru the conduit. Note: You may want to extend the ground wire and feed it thru the conduit if you cannot get a good ground within the door.
- Go to the Passenger Door (RF). Hang Switch Remove terminals from connector—wrap terminals with electrical tape—lubricate the 3 wires—feed thru conduit.
- Replace the terminals into the 3 prong connector. Ensure that the wire colors match up.
- You are ready to run the LR and RR to the back of the car along each side under the carpet. Put the 3 prong connectors back together being sure to match up the wire colors.